# GTX 670 Backplate Installation

## Step 1

Remove the 9 screws indicated below using a #0 Philips head or T6 Torx screw driver depending on the type of screw installed on your card. Remember to keep the stock screws incase the card needs to be returned to EVGA.

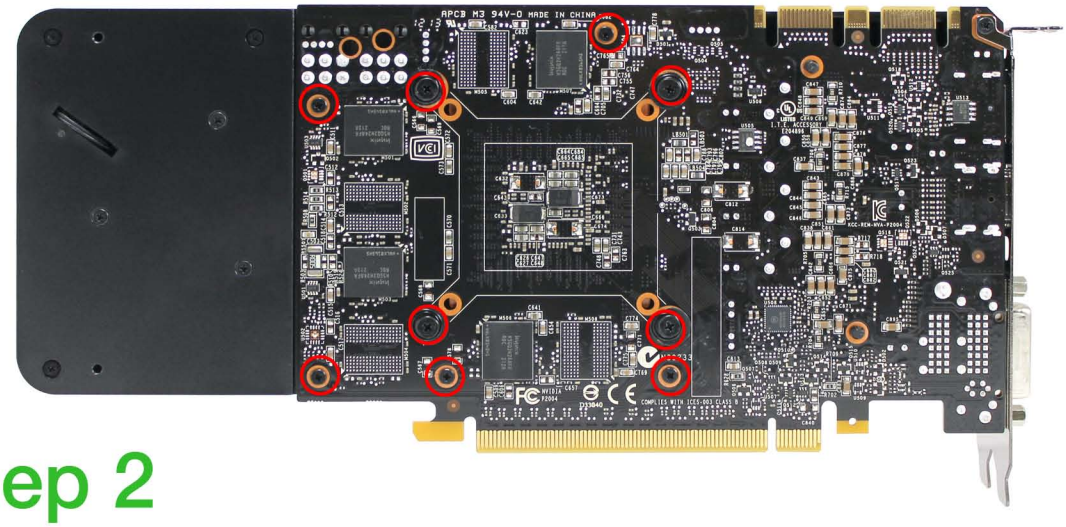

## Step 2

Remove the protective cover from the front of the backplate. Place on the back of the card and align the screw holes.

## Step 3

Use the 11 screws included with the backplate (not the ones you removed) to install the backplate to the PCB. All the provided screws use a #0 Philips head screw driver. The spring screws circled in orange must be installed first. Once the backplate is firmly attached to the card you are ready to install your GTX 670 and begin pwning.